

IMPORTANT SAFETY AND PRODUCT INFORMATION



WARNING

Failure to comply with the following warnings, may result in accidents or medical events resulting in death or serious injury.

Warning on battery

This device uses a Lithium-Polymer battery.

If these instructions are not followed, battery life may be shortened or risk of damage to the device, fire, chemical burns, electrolyte leakage and injury may occur.

- Do not expose the device or battery to fire, explosion, or other hazards.
 - Do not disassemble, modify, recondition, puncture, or damage the device or battery. Batteries may contain hazardous chemicals and could explode or cause damage if mishandled.
 - Do not remove or attempt to remove the non-user-replaceable battery.
-

Device warnings

- To avoid possible damage to the device, do not leave it exposed to heat sources or in places with high temperatures, such as a vehicle parked in the sun.
 - Do not use or store the device for an extended period outside the temperature range indicated in the manual.
 - Do not use power cables, data cables or power adapters not supplied by Voon Sports or not properly certified. Use only the charger provided by the manufacturer. Use of an incorrect charger may damage the battery or the device.
 - This product is susceptible to electrostatic discharge (ESD), which may cause malfunction or permanent damage to the product
 - Avoid exposing the device to strong electromagnetic fields or radio frequency interference, as this may affect its operation and battery life.
-

NOTICES

If the following warnings are not heeded, personal injury or property damage may occur and the functionality of the device may be adversely affected.

Notices on use

- Avoid leaving the device on charge for long periods of time, as this may reduce the life of the battery. Disconnect the charger once the battery is fully charged.
 - Contact your local waste disposal service to dispose of the device or battery in a manner that complies with all applicable local laws and regulations.
 - Do not dispose of batteries in fire or regular trash. You must recycle used batteries in accordance with local regulations to avoid environmental contamination.
-

Health notices

- The data provided by these devices is a rough estimate of your activity and the metrics recorded but may not be completely accurate.
 - Keep devices out of the reach of young children.
-

Battery notices

- If you do not plan to use the device for an extended period, charge the battery to approximately 50% and store it in a cool, dry place.
 - Charge and use the device within a specified temperature range. Extremely high or low temperatures may adversely affect the capacity and life of the battery.
-